

Accessing a Frad Through Mlink

The following document will explain how to access a Frad thru Mlink. Mlink is the best way to access a Frad for configuration and monitoring remotely.

From the POUND SIGN, invoke Mlink with the following command:

```
# mlink <enter>
```

After this command is given, the following response will be displayed:

```
=====
                          Version 6.19.05 Serial 192-0042
MLINK (c) 1993 Legent Corporation
                          All Rights Reserved Worldwide
=====
***Error accessing communications port:ttyaa
***Reason: No communications port
***There has been an initialization error. You
***must correct the configuration or exit MLINK.
***Do you wish to reconfigure? (Y or N)
```

At this point you should answer YES. Enter the letter "Y"
The following response will be displayed:

```
***MLINK Configuration Menu
***
***<CR> Exit configuration mode
```



.....