

Configuring ABCS TCS VPN Routers

NOTE: The host store has to be on the internet before the remote store to establish the vpn. If you have the remote store on the internet before the host store, just turn off both routers. Boot the host store up first, then boot the remote store up.

HOST STORE:

1. Log into the router as root.
2. type setup and press enter.
3. type h for host
4. put in the store name
5. put in the router's LAN ip address (usually 192.168.1.254)
6. type in the IP of the ABCS Server.
7. put in an s for a static ip address, or d for dynamic.
8. If dynamic, skip to step 11 ... if static, put in the Static IP address provided by the customer/isp.
9. put in the subnet mask provided by the customer/isp
10. put in the internet gateway provided by the customer/isp
11. Tell how many remote locations there are.
12. Specify the network of each remote location (ex. 192.168.2.0)
13. Press enter to exit
14. type reboot to reboot the router.

REMOTE STORE:

1. Log into the router as root.
2. type setup and press enter.
3. type r for remote
4. put in the store name
5. put in the router's LAN ip address (ex. 192.168.2.254)
6. put in the IP of the ABCS Server (usually a backup server that is on the same network)
7. put in an s for static ip address, or d for dynamic.
8. If dynamic, skip to step 11 ... if static, put in the Static IP address provided by the customer/isp
9. put in the subnet mask provided by the customer/isp
10. put in the internet gateway provided by the customer/isp
11. enter the host location's internet IP Address (ex. 12.148.134.14... this is not the 192.168.1.0 address)
12. Press enter to exit.
13. type reboot to reboot the router.