

POWERCHUTE DISABLE

If you are experiencing a problem with beeping coming from your server, then You may need to remove the powerchute program/ and or remove it and re-install It. To do so, follow these instructions.

- a. Log in as root to the prompt
- b. From the prompt type the following command `# cd /usr/lib/powerchute_vs` (Then hit your enter key)
- c. Above the next prompt you should see `/usr/lib/powerchute_vs`. If you do...
- d. From the prompt type `# lf` Then hit the enter key
- e. With the files displayed, make sure you see the file `Remove.sh*`
- f. If you do, from the prompt type `# ./Remove.sh` (Then hit the enter key)
You should immediately see the following scripts go across you monitor screen...

Killing upsd instance running with pid XXX

Done.

Removing Startup Files.

Done

Cleaning Shutdown Files.

Done

Removing `pcp_unix.apc` from `/etc/apc_repository`

Removing contents of install directory

Done.

`#/usr/lib/powerchute_vs`

- g. Now, from the prompt type `# custom` Hit the enter key now!
- h. Once in `custom>Software>Verify System>Fix/Repair Broken missing Symbolic links`
- i. Finish the process and once again go into...
- j. `Custom>Software>Verify Software>Fix/Repair Broken missing Symbolic links`
- k. Finish the process and escape to prompt
- l. You should now be finished with process—monitor your problem to see if fixed

Note: In my example, the reason that I have removed powerchute, is because my ABCS Server is beeping several times a day, unexplained. Two or three times A day it beeps 18 times, with long pauses in between beeps. David thinks that It is powerchute program. We will see! We checked syslog, it did not indicate A powerchute abnormality.