

Display Pole Timestamp

Per David Anders, the display pole **time** is stamped by the Form file that is used to set it up. So if you have several Display poles at the location (that have the right time), then set your form file (for the new Display pole), with the same posform file as the other poles. If that does not work, then delete the POS forms and printer setup for that workstation. Then redo the setup for that workstation.