

# Configuring US Micro Products Gertec TC505

**Connect your price checker to power. Connect a PS/2 Keyboard to the PS/2 Port on the right hand side of your price checker. To Enter into the price checker's configurations press the letter “P” on your keyboard.**

1. Press 2. for Idioma. Press the Backspace key to toggle to “English and Press Enter.
2. Press 1. for Network
  - a) Press 1. for General
  - b) Press 1. for DHCP and press the Backspace key to toggle “On” to the “Off” position and press enter.
  - c) Press 2. for I.P. Address. Type in your Price Checker's I.P. address and press enter.
  - d) Press 3. for Netmask. Type in your Price Checker's Netmask and press enter.
  - e) Press 4. for Gateway. Type in your Price Checker's Gateway and press enter.
  - f) Press 5. for DNS. Type in your Price Checker's DNS and press enter. “DNS optional”.
  - g) Press 6. for OK. This will take you back to the previous menu.
3. Press 2. for Wireless Settings. Wireless password is “admin” and press enter.
  - a) Press 1. for Habilitar WiFi. Press Backspace to toggle “On” to “Off” if you plan on using this price checker wired, or press backspace to toggle “Off” to “On” if you plan on using this price checker wireless. Press Enter.
  - b) Press 2. for Mode. Press Backspace to toggle “Ad-Hoc” to “Managed” and press enter.
  - c) Press 3. for SSID. Enter your ssid and press enter.
  - d) Press 4. for Channel. Enter 6 and press enter.
  - e) Press 5. for Enable Wep. Press Backspace to toggle to “On” position.
  - f) Press 6. for Wep Key. Enter your wep key and press enter.
  - g) Press 7. for OK. This will take you back to the previous menu.
4. Press 3. for Terminal Name. Enter your price checker's name and press enter. Example kiosk10\_net1
5. Press 4. for Server Address. Enter your Advantage Server I.P. Address and press enter.
6. Press 6. for OK. This will take you back to the previous menu.
7. Press 3. for Messages
  - a) Press 1. Hold the backspace key to clear all information and press enter.
  - b) Press 2. Hold the backspace key to clear all information and press enter.
  - c) Press 3. Hold the backspace key to clear all information and press enter.
  - d) Press 4. Hold the backspace key to clear all information and press enter.
  - e) Press 5. for Time Exhibition. Change 5 to 10 and press enter.
  - f) Press 6. for OK. This will take you back to the previous menu.
8. Press 5. for Save and Exit

Now you will need the USMicro Products Scansheet to Program the barcode Scanner.