



AMERICAN MICRO SYSTEMS M2500

The following is the proper setup for the American Microsystems 2500 scanner attached to a serial device such as a Spotline or wyse terminal. It is not ment to be used to set up a thin client. The setup for the thin client is on page 2. The barcodes on pages 3 through 5 can be used for either setup.

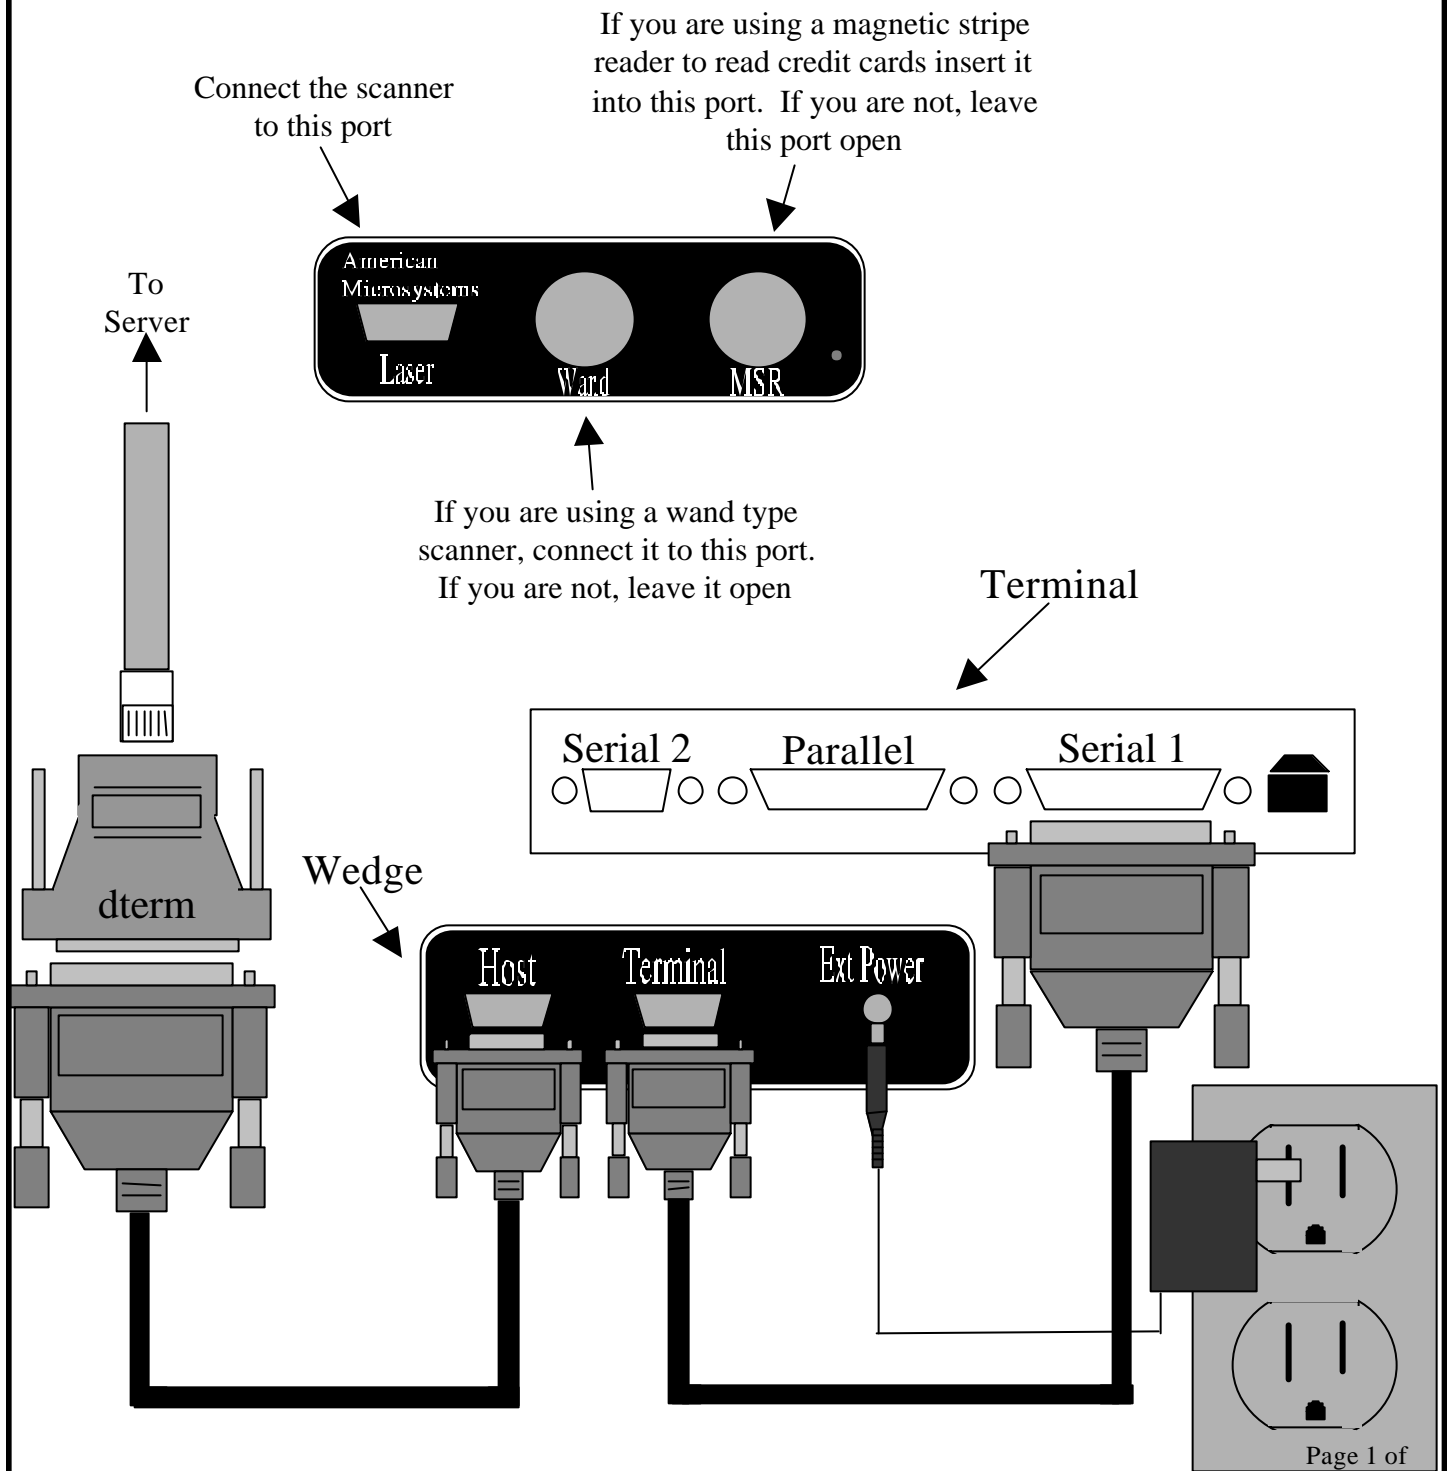


AMERICAN MICRO SYSTEMS M2500

The following is the proper setup for the American Microsystems 2500 scanner attached to a thin client. It is not ment to be used to set up any other type of terminal. The setup for all other serial terminals is on page 1. The barcodes on pages 3 through 5 can be used for either setup.

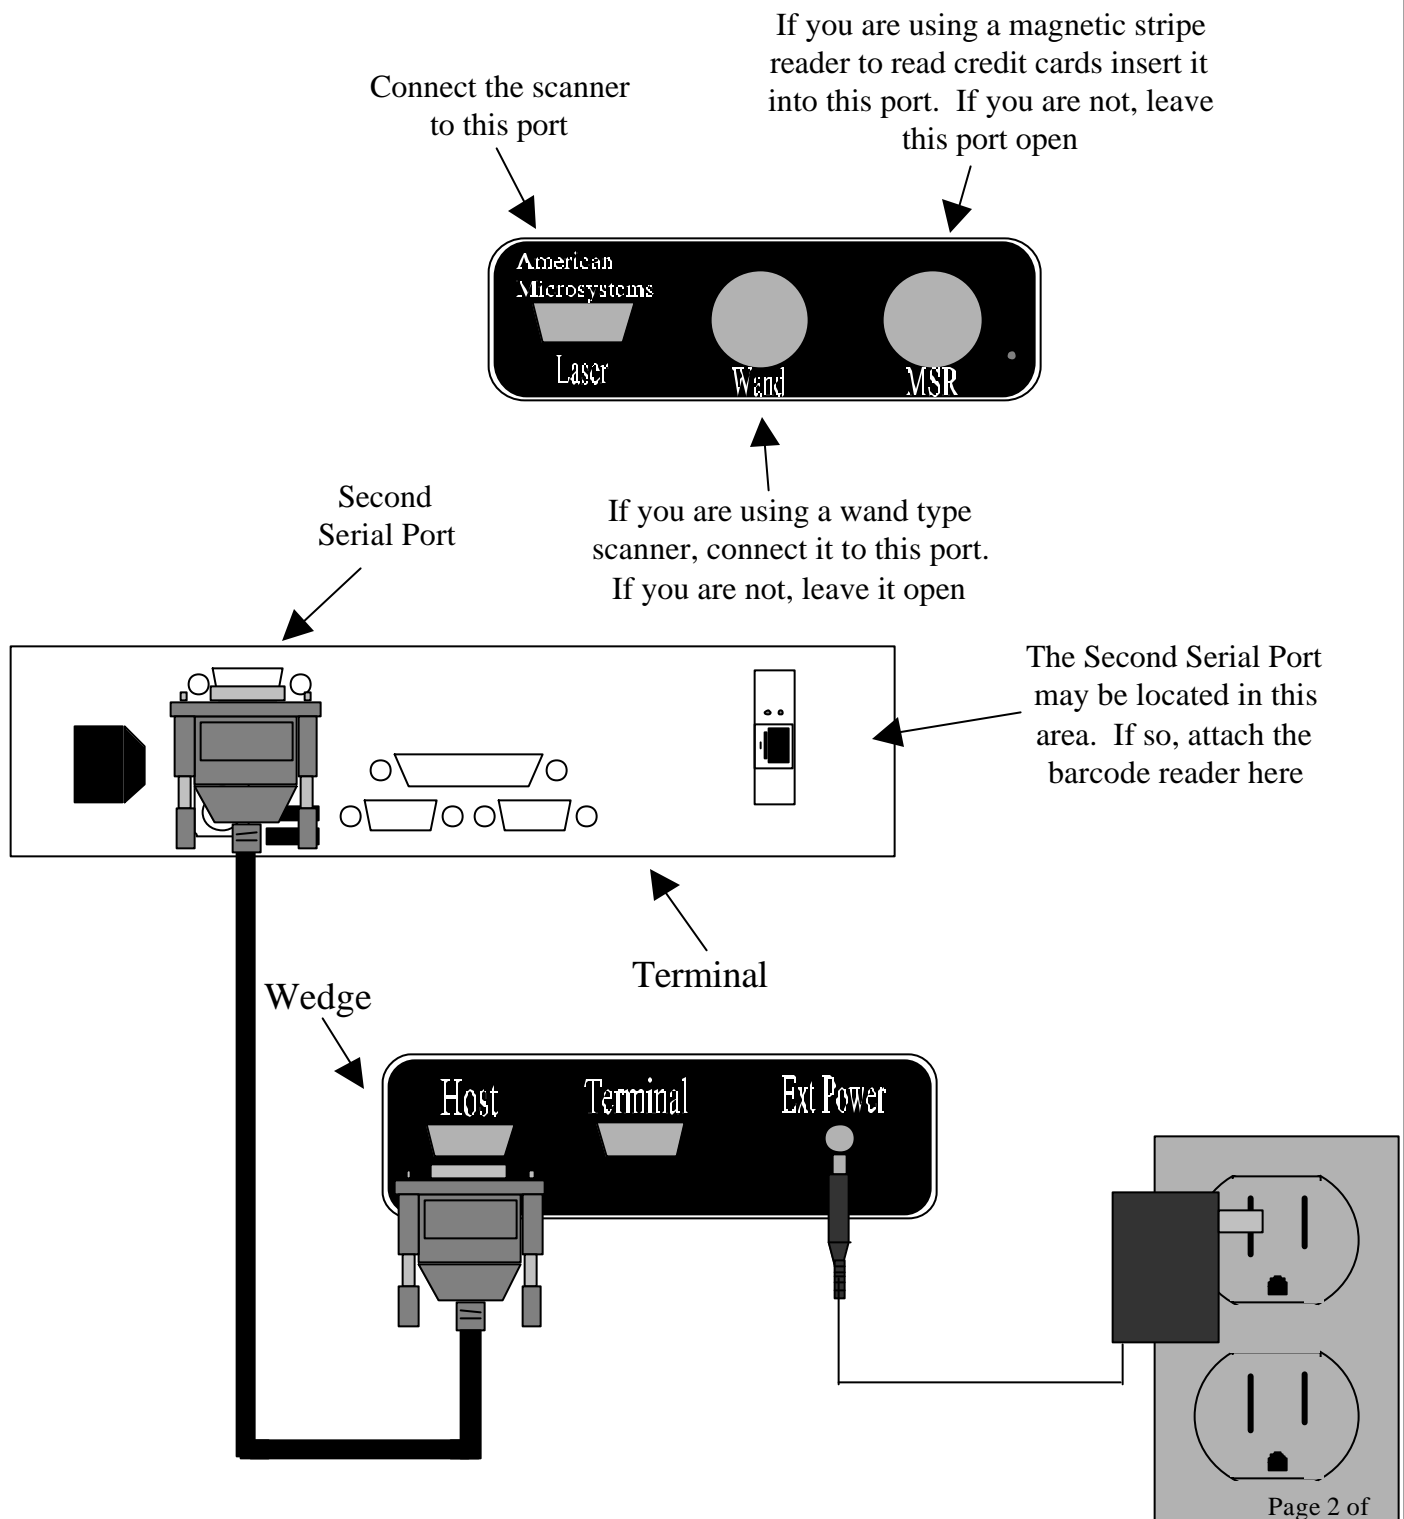


AMERICAN MICRO SYSTEMS M2500

This section will change all settings to their default values.

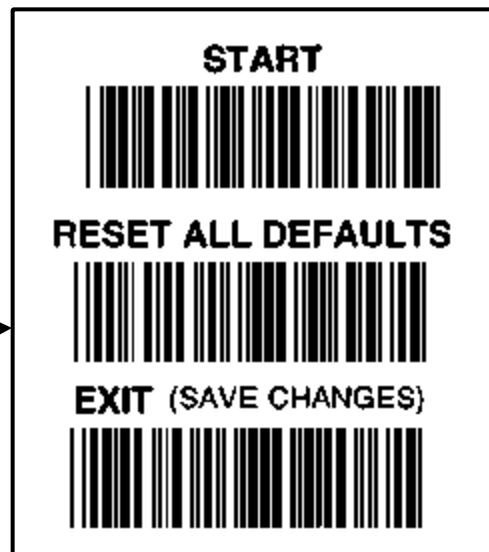

This section sets the scanner to append two carriage returns to the output. This means that when you scan an item in point of sale the cursor will stop on the next line. If you want the cursor to stop on the quantity field only scan one of the barcodes labeled CR.

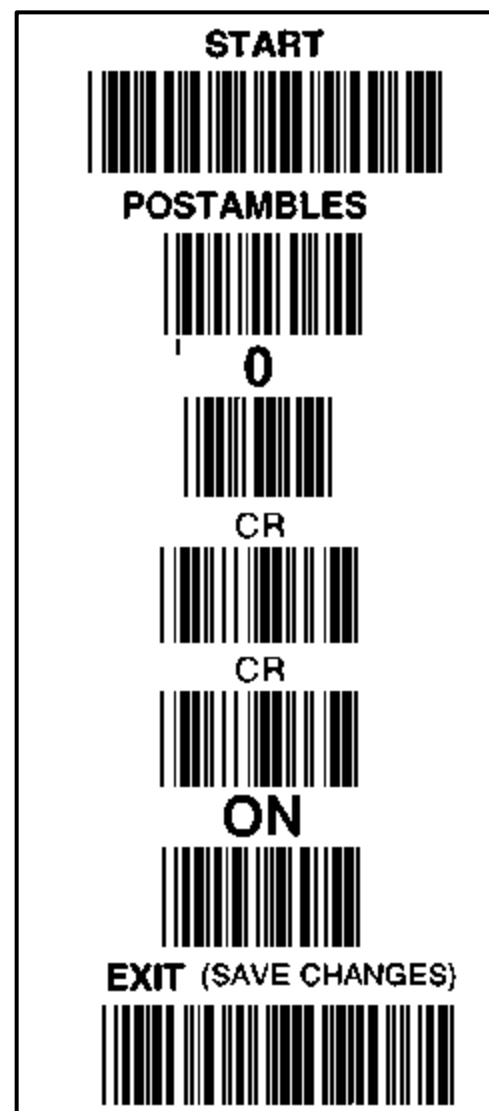

AMERICAN MICRO SYSTEMS M2500

This section will set the baud rate to 38400. This is the speed at which the scanner communicates to the server. It must be the same baud rate at which the terminal communicates to the server. If the baud rate at which you communicate is anything other than 38400 please contact advantage.



START








BAUD RATE

8

EXIT (SAVE CHANGES)

 

This section removes the leading and trailing digit from EAN barcodes. It has no effect on normal UPC Barcodes.



START

EAN

2

OFF

4

OFF

EXIT (SAVE CHANGES)


AMERICAN MICRO SYSTEMS M2500


When the scanner is set to defaults it is set to read 12 digits. Most systems uses 10 digit barcodes. This section will set the scanner to use 10 digits instead of 12 so that systems that use 10 digit barcodes can understand it. If your system uses 12 digit barcodes do not scan this section. If your system uses 10 digit barcodes or you do not know how many digits you use, continue scanning this section.



START



UPC



3




OFF




4



OFF



5



OFF



6



OFF



EXIT (SAVE CHANGES)

