



P 370/470 RF Scanner

1. Scan the dual barcode located on the receiver unit.
2. Reset the unit by func and then *.
3. Go into the setup menu by pressing func and bk.
4. Arrow down to Parameter Control and press enter.
5. Press enter on Scan Parameters.
6. Scan the following barcodes.

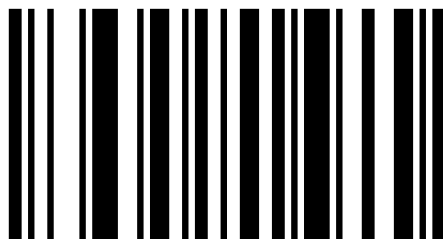


SET ALL DEFAULTS

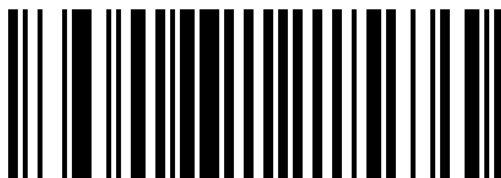

DO NOT TRANSMIT UPC-A CHECK DIGIT

P 370/470 RF Scanner

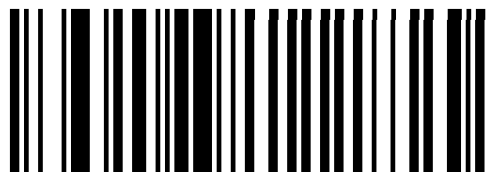

**NO PREAMBLE
(<DATA>)**

7. Press func and then bk.
8. Press enter on system setup.
9. Arrow down to Set Scan Options and press enter.
10. Arrow down to <DATA><SUFFIX> and press enter.
11. Arrow up to exit and press enter.
12. Arrow up to Return to App and press enter.