



SYMBOL LT1804 SERIAL SCANNER

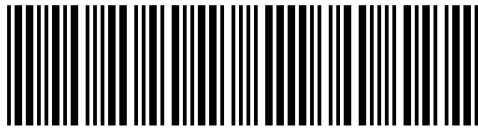


SET DEFAULT




RS-232 HOST TYPE

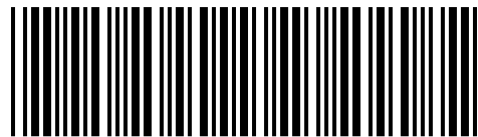


STANDARD RS-232

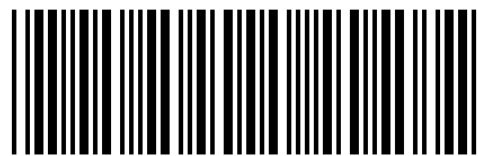

ENTER

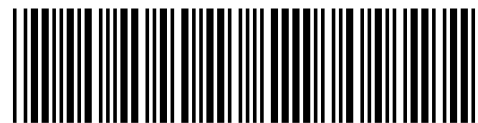

UPC-A PREAMBLE

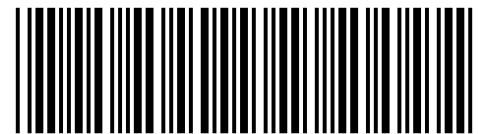


NONE




ENTER

 
Continued...




TRANSMIT UPC-A CHECK DIGIT

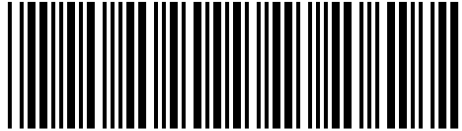


DISABLE

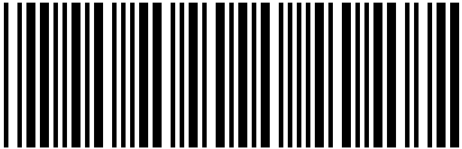

ENTER

 

SUFFIX

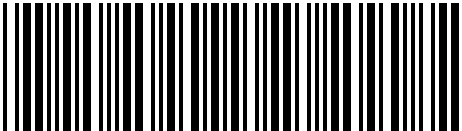

**USER'S CHOICE
2 CHARACTERS**



0



1



3

Continued...




0



1



3

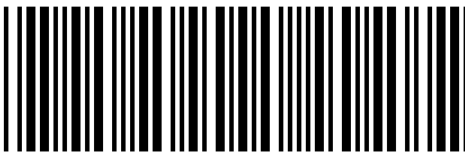

ENTER

Done!