

HP Color LaserJet 5 and 5M Printers - Paper Size Switch Configuration for the Front Input Tray


In this document:

[Information](#)

Information [Top of Page](#)


Trays installed in the printer have tabs that engage switches inside the printer. The combination of set switches tells the control board which size tray is installed. Figure 1 illustrates a tray with the three switches, and the table below explains the paper sizes that are associated with the switch settings.

 Figure 1: Front input tray

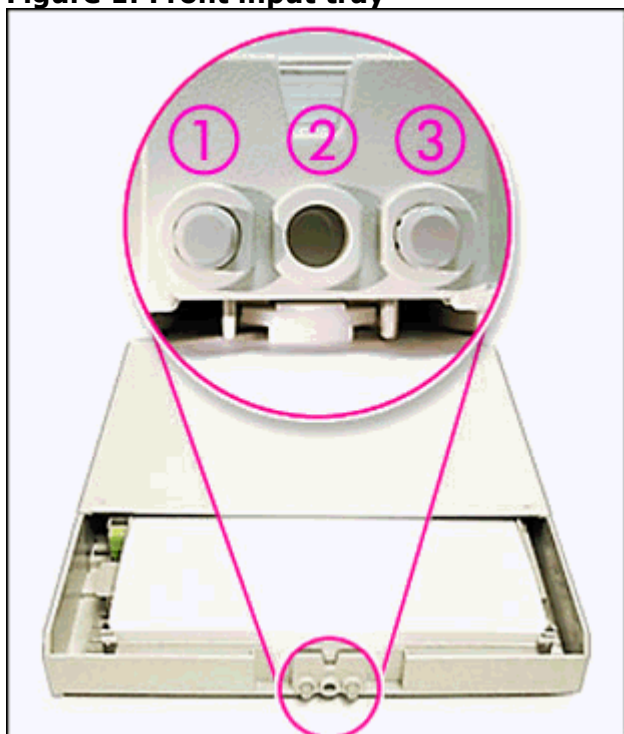

Paper Size	Switch 1	Switch 2	Switch 3
A4	ON	OFF	OFF
Executive	ON	ON	OFF
Legal	ON	ON	ON
Letter	ON	OFF	ON
Ledger	OFF	ON	ON

A3	OFF	ON	OFF
----	-----	----	-----

 

Contact HP?

Find the nearest service center	Buy HP (United States)	Buy HP (Outside the United States)
---	--	--

Copyright (C) Hewlett-Packard Co. 2000
This information is subject to change without notice and is provided "as is" with no warranty.
Hewlett-Packard shall not be liable for any direct, indirect, special, incidental or consequential damages in connection with the use of this material.