




HP Color LaserJet 5 and 5M Printers - How to Perform Printer RESETs

In this document:

	RESETting the Printer to User Defaults
	RESETting the Printer to Factory Defaults
	Cold Reset

RESETTING THE PRINTER TO USER DEFAULTS

[Top of Page](#)

1. Click ON-LINE until the On Line indicator is no longer lit.
2. Click RESET. 07 RESET appears on the printer display. The printer automatically returns ON LINE after the printer is RESET.

A 07 RESET clears the page buffer, removes all non-permanent fonts and macros, and returns all print menu settings to user selected defaults.

RESETTING THE PRINTER TO FACTORY DEFAULTS

[Top of Page](#)

1. Click ON-LINE until the On Line indicator is no longer lit.
2. Press and hold RESET.
3. When 09 MENU RESET is displayed, release RESET.

09 MENU RESET appears on the printer display after approximately five seconds. The printer automatically returns ON-LINE after the printer is RESET.

A 09 MENU RESET clears the page buffer, removes all non-permanent fonts and macros, and returns all printing menu defaults to their factory defaults, except for CONFIG menu settings.

COLD RESET [Top of Page](#)

Cold Reset clears all data from the print buffer and returns the Printing Menu and the Configuration Menu to the factory default settings.

To perform a cold reset:

1. Press ON-LINE while powering on the printer.

2. Release ON-LINE when the control panel lights are on. The display will read 08 COLD RESET.



3. The Cold Reset is complete when the display reads 05 SELFTEST

[→ printal](#)

[→ feedback t](#)

[privacy statement](#)

[using this site means you agree to its terms](#)

© 1994-2002 hewlett-packi