

Slave Printer Pinout for Spotline

Make sure that you are using serial port two on the back of the spotline. Then make sure that the spotline configuration for the printer setup is serial 2. It is important to note that the pin out below is set up backwards from the standard setup. Pin 1 is on the right hand side of the connector.

25 Pin Connector

Pin	Hole
1	2
2	3
3	7
4	5
5	20

9 Pin Connector

Pin	Hole
1	2
2	3
3	5
4	4
5	6