

Programming the Printronics Proline Series 5

OL1200

This printer will lose its internal programming when disconnected from a power source! You may perform the following in order to reprogram.

1. Raise the top cover
2. Press right arrow once. Should take you to emulation
3. Press down arrow three times. Should take you to printer protocol
4. Change to Epson FX with the right or left arrows.
5. Press the up & down arrow at the same time to unlock it, then select it by pressing the enter keys
6. Lock it back with the up and down arrows at the same time.
7. Go back up with the up arrow key three times to emulation. Then right arrow twice to host interface.
8. Down arrow once to change the host interface to serial 1 with the right or left arrow.
9. Unlock it by pressing the up and down arrows at the same time then select it by pressing enter and lock it back by pressing up and down arrows at the-same time again.
10. Put printer online!