

Tharo Freedom Barcode Printer Reset to Factory Defaults

This printer uses standard DB25 connector ("Term") and requires no special configuration to run. The printer, however, must be tested using the barcode label print program in the software since only that program communicates properly with the printer. You must perform 'ltyset' on the printer port to be used and set the port to 9600 baud DTR.

NOTE: To perform a self-check on the printer:

Turn off printer
Depress FEED
Turn on printer

After the self-check (the printer will stop printing), turn the printer off & on again to reset it.