

## Ithaca Cash-Slip Printer

To reset the baud rate, you must unplug the power and open the lid to the printer.

As you plug in the power, hold down the button inside the printer until the light starts to flash.

Close the lid and the configuration will start to print out.

Press the paper feed button to start. When the baud appears, press the paper feed button until the correct baud rate appears {9600} on the ethernet spotlines. You can set the baud rate to {384000} on the printer and the spotline serial port it is attached to.