

Ithaca 80+

Fix for Ithaca cash slip printer that print to lightly.

When a Ithaca 80+ printer is printing to lightly to read follow the following steps to fix :

1) Turn over the printer and remove the four screws on the bottom. Then gently lift the cover off the printer.

2) You will then see a metal panel with two holes on either side with screws in them. You need to loosen the screws on the side that is not printing correctly. Then you need to lower the panel slightly on the side that you loosened. (note : this side will be inverted since it is upside down; also do not loosen both sides of the panel at the same time, if both sides need to be adjusted loosen one then the other)

3) After adjusting the panel put the cover back on the printer and print a test page, if there was some improvement but it is still to light repeat the steps in this document.

