

# Adding a serial Ithaca 80+ printer to the Serial Port of a Thin Client

When adding a parallel Ithaca printer to a thin client, you will need to go into sysut, choose printer, then choose software printer maintenance. In Software printer maintenance press insert to add a new printer. Enter R next to [L]ocal/[R]emote/[T]ransparent. Next to printer type, type in ithaca93. In the device file or spool command field type | tcsprint tcsname lpt > /dev/null 2>&1 where tcsname is the name of the tcs. For example, if this printer is on tcs101 the spool command would be | tcsprint tcs101 lpt > /dev/null 2>&1

```
Printer Id code.....: lp01
Description.....: Cash slip printer
Location.....: front
[L]ocal/[R]emote/[T]ransparent: R
Printer type ([F7] for query): ithaca93
Forms class.....: cash
Device, file or !SpoolCommand: | tcsprint tcs101 lpt >/dev/null 2>&1
Command to execute before open:
Command to execute after close:
```

