

# Configuration for the Okidata Pacemark 3410 Printer

The SEL button will take the printer on and offline.

Holding PRINT QUALITY/CHARACTER PITCH will take you into menu mode.

The label MENU MODE has lines pointing to these buttons.

The PRINT QUALITY/CHARACTER PITCH buttons will print the printer's configuration if they are depressed while in the MENU mode.

To reset the factory defaults, turn the printer off, hold down the SEL & LF keys while turning the printer back on.

To configure the printer, press the following buttons in the order they appear below:

Group	(1x)	This should put you in the PRINTER CONTROL group.
Set	(1x)	To set your emulation to EPSON FX.
Group	(4x)	This will take you to the BOTTOM FEED group.
Item	(1x)	This puts you in the Form Tear-Off item group.
Set	(1x)	To set this option to 500 ms.
Group	(2x)	This will put you in the SET-UP group.
Set	(1x)	To set your graphics option to BI-DIRECTIONAL.
Group	(2x)	This will put you in the last group, SERIAL I/F.
Item	(4x)	This will take you to the Busy Line option.
Set	(2x)	To change this option to DTR.
Item	(2x)	This will take you to the DSR Signal item group.
Set	(1x)	To change this option to invalid.

After going through this procedure press EXIT to save your settings and return the printer online.

The page width settings under REAR FEED, BOTTOM FEED and TOP FEED may also need to be configured.

Use the Okidata 320/321 Turbo driver (oki321T) in the software.