

For: OKIDATA 320/321(TURBO), OKIDATA 520/521, OKIDATA 590/591

\* To load paper, insert the first two holes of paper in the tractor, depress the FF/LOAD button then depress the SEL button to receive print jobs.

\* To remove paper, you may press PARK.

\* Hold SHIFT & Press MENU - To print out internal program settings.

\* Press PRINT - This print out will show the present setting in your printer for examination.

#### PROGRAMMING OKIDATA PRINTERS

The above listed Okidata printers come with both serial and parallel interface connections. The printers are not configured via DIP switches, but rather via menu commands. The printers need to be configured for usage.

Here's how:

1. Make sure there's paper in the printer for the parameters to be printed. You may wish to pull the front cover forward so you can clearly see the print line.

2. Return the printer to factory default settings:

a. Turn off the printer

b. Depress and hold SEL & LF buttons

c. Turn the printer on & release the buttons after movement stops.

3. Press the following buttons once the printer is on-line in the sequence listed below:

NOTE: (2x) means the number of times you press that button.

HOLD SHIFT & PRESS MENU			
SET	(1x)	Epson FX	
GROUP	(3x)	Rear Feed	
ITEM	(1x)	Form Tear-Off	
SET	(1x)	500 ms	
GROUP	(1)	Bottom Feed	
ITEM	(1x)	Form Tear-Off	
SET	(1x)	500 ms	
GROUP	(4x)	Serial I/F Option	
ITEM	(4x)	Busy Line	
** SET	(2x)	DTR <----- Note: For XON/XOFF operations,	
ITEM	(2x)	DSR Signal	change PROTOCOL to XON/XOFF
SET	(1x)	Invalid	(pertains to off site or
SHIFT & MENU			modem use printers)
FORM FEED		paper to tear off, turn printer off and back on.	
		You are now back online.	

4. Print all settings by holding down SHIFT & pressing MENU, then PRINT.

5. Hold SHIFT & Press MENU to return to normal operation.

(rev. 10-10-96)