


Configuration for the Oki 420 Dot Matrix Printer

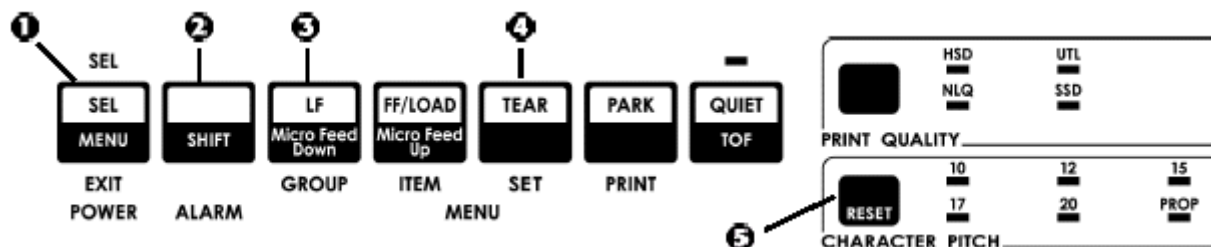

PRINT CURRENT PRINTER SETTINGS

- 1 Make sure paper is loaded in the printer.
- 2 Press and hold **SHIFT**, then press **SEL** to enter the Menu Mode.
- 3 Press **PRINT (PARK key)**.

RESET PRINTER TO FACTORY DEFAULTS

- 1 Turn the printer off.
- 2 Press **SEL + LF** while turning the printer on.

CONFIGURATION FOR THE PRINTER

- 1 Press and release **SHIFT** (1) to take the printer off-line. (The **SEL** light goes out.)
- 2 Press and hold **SHIFT** (2), then press the **SEL**

3 Group (1x)

4 Set (1x)

5 Group (3x)

6 Item (1x)

7 Set (1x)

8 Group (1x)

9 Item (1x)

10 Set (1x)

11 Group (2x)

12 Set (1x)

13 Group (2x)

14 Item (4x)

15 Set (2x)

16 Item (2x)

17 Set (1x)

Press and release **SEL** (1) to put the printer back on-line. (The **SEL** light will turn on.)