

Star SP300 Cash Slip Printer Setup

For XON/XOFF handshaking rather than DTR, Change switch 3-5 to OFF

NOTE: To return the printer to factory default settings:

Turn off printer
Depress FEED
Turn on printer

NOTE: This printer does not have the capability to print in red as the Star DP8340 can. Instead, it prints those characters in inverse. You may wish to disable inverse/red printing by changing flag 186A to 1. However, this changes printing on cash slip printers for the whole company, so if you have a Star SP300 and a Star DP8340, tough luck

NOTE: To set this printer up as a slave printer, make a "Term9!" connector to put on the back of the wyse 150 terminal where it says, "Serial 2." Use a regular connector for the SP300 printer. The wire is standard (head-to-head). Now get into the setup mode on the terminal and hit the F11 key for printer setup. It should read for 9600 baud, 8, 1 - but instead of parallel, set it up for serial. Go to the utility system and setup the printer definition for the dedicated printer. Even though the printer is set up as serial, it is still a printer.