


Adding a Parallel Star SP300 printer to the Parallel Port of a Thin Client

When adding a parallel Star SP300 printer to a thin client, you will need to go into sysut, choose printer, then choose software printer maintenance. In Software printer maintenance press insert to add a new printer. Enter R next to [L]ocal/[R]emote/[T]ransparent. Next to printer type, type in star. In the device file or spool command field type | tcsprint tcsname lpt > /dev/null 2>&1 where tcsname is the name of the tcs. For example, if this printer is on tcs101 the spool command would be | tcsprint tcs101 lpt > /dev/null 2>&1

```
Printer Id code.....: lp01
Description.....: Cash slip printer
Location.....: front
[[L]ocal/[R]emote/[T]ransparent: R
Printer type ([F?] for query): star
Forms class.....: cash
Device, file or !SpoolCommand: | tcsprint tcs101 lpt >/dev/null 2>&1
Command to execute before open:
Command to execute after close:
```

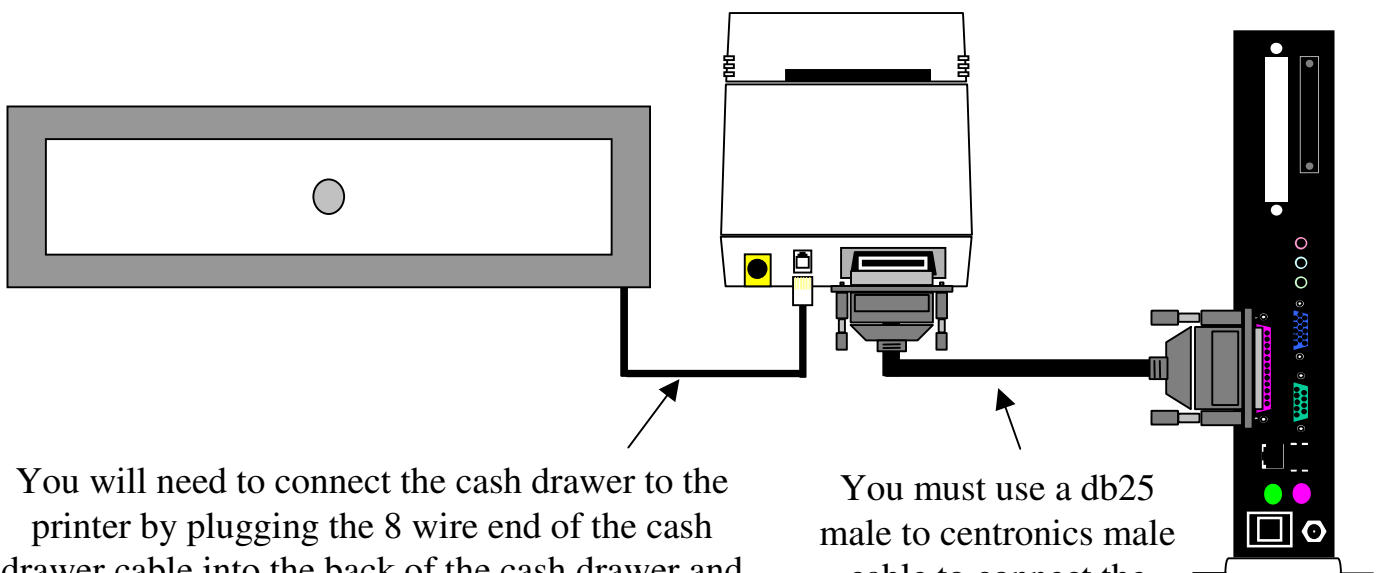

You will need to connect the cash drawer to the printer by plugging the 8 wire end of the cash drawer cable into the back of the cash drawer and the 6 wire end into the port on the back of the printer. This cable is a 0014A# cash drawer cable.

You must use a db25 male to centronics male cable to connect the printer to the terminal