

Resetting Sync on Tape Drive

Problem: Problem reading and writing to certain Tape Drives. Sometimes they work, sometimes they do not work.

Solution: Perform shutdown and reboot of system. Follow these steps...

- a. Hit Ctrl-A when you are prompted too (during bootup)
- b. Select the option ...Configure Host Adapter Then press the enter key
- c. Select the option....SCSI Device Configuration Then press the enter key
- d. Arrow to #2
- e. Select the optionEnable Disconnection
- f. Select the "No" option
- g. Arrow Up and Hit the Enter key on "Set to lowest Number"
- h. Escape
- i. Save Changes
- j. Exit.....Yes
- k. Reboot