

# Configuration of a Spotline 110 (Serial)

In sysut menu, set the terminal type to ansic and baud rate to 38400. Connect a standard terminal connector and head to head cable to serial 1.

Press the Scroll/lock key and ESC to enter setup mode.

Select...

- **Factory Configuration** (enter)
- **Unix SCO** (enter)  
It will ask '**Confirm Reset To Factory Defaults**' Yes (enter)

Select...

- **Sessions** (enter)  
Under **Media in line 0, change it to none. Change monitor to color**  
Should look like this:

Sn	Emulation	Keyb	Monitor	Media	Printer	Host	Auto
0	[Ansi/SCO V4]	[ASCII]	[Color]	[None]	[None]	[None]	[No]
1	[Prologue]	[Scan]	[Mono]	[None]	[None]	[None]	[No]

**Port Configuration** (enter)

Under Serial 2, change Type to not used or if going to hook up a printer change it to printer and Flow to DTR.

	<u>Serial 1</u>	<u>Serial 2</u>	<u>Serial 2 (with Printer)</u>
Type	[Terminal]	[Not used]	[Printer]
Speed	[38400]	[38400]	[Printer]
Data	[8 bits]	[8 bits]	[9600]
Parity	[None]	[None]	[None]
Stop	[1 stop]	[1 stop]	[1 stop]
Flow	[DTR]	[DTR]	[DTR]
Line	[Direct]	[Direct]	[Direct]

After changes press enter

**Session** (enter)

Change Media from None to Ser. 1. If setting up a printer, change Printer from None to Ser. 2.

Sn	Emulation	Keyb.	Monitor	Media	Printer	Host	Auto.
0	[Ansi/SCO v4]	[ASCII]	[Color]	[Ser. 1]	[None]	[None]	[No]
1	[Prologue]	[Scan]	[Mono]	[None]	[None]	[None]	[No]

After changes press enter

- Save and Exit  
Exit and Save, Proceed?  
Yes and enter

If you have problems, check the following items:

LANGUAGE	<b>ENGLISH</b>
KEYBOARD	<b>AMERICAN</b>
COLORED SETUP	<b>YES</b>
DEFAULT SESSION	<b>0</b>
ACTIVATE	<b>NO</b>

After changes press enter.