

Configuration of a Wyse 150-25

Press:

Shift-Select

ESC

Enter

F1

Spacebar (twice)

Down Arrow

Spacebar (once)

F4

Spacebar (twice)

Down Arrow

Spacebar (twice)

Terminal Display:

(Set screen with highlighted "bars" on the bottom row)

(Use the enter key on the numeric keypad, not the main Part of your keyboard)

Columns = 80

Columns = Econ-80

Lines = 24

Lines = 25

Baud Rate = 9600

Baud Rate = 38400 *

Rcv HndShk = None

Rcv HndShk = DTR *

If you have "F9" at the bottom of your screen, press F8; if you don't have "F9" at the bottom of your screen press F6.

Backspace

F12

Spacebar

F12

("T"s should appear in the highlighted area)

No

Yes

(You're out of the setup mode)