

HOW TO SET TERMINAL CONFIGURATION

This document explains how to reset the configuration on your terminal when it is no longer communicating properly with the computer.

To configure your terminal, you must first determine what kind of terminal it is. The two most commonly-used terminals, Wyse 50 and Wyse 150, are explained here. Please follow the instructions based on the model of terminal you are reconfiguring.

A Wyse 150 terminal is characterized by a round push-button power switch on the right side of the terminal. The keyboard has function keys F1 through F12.

HOW TO SET TERMINAL CONFIGURATION

WYSE 150-25

PRESS: TERMINAL DISPLAY:

SHIFT-SELECT (Setup screen with highlighted "bars" on the bottom row)

ESC

ENTER (Use the enter key on your numeric keypad, not the main part of your keyboard)

F1 Columns = 80

SPACEBAR (twice) Columns = Econ-80

DOWN ARROW Lines = 24

SPACEBAR (once) Lines = 25

F4 Baud Rate = 9600

SPACEBAR (twice) Baud Rate = 38400 *

DOWN ARROW Rcv HndShk = None

SPACEBAR (twice) Rcv HndShk = DTR ***

If you have "F9" at the bottom of your screen, press F8;
if you don't have "F9" at the bottom of your screen, press F6.

BACKSPACE ("T"s should appear in the highlighted area)

F12 No

SPACEBAR Yes

F12 (You're out of setup mode)