

## Wyse 60

The Wyse 60 is characterized by the Toggle Power Switch on the Right side of the terminal. The Keyboard for this terminal typically has F-1 through F-16 keys.

**To enter into the setup mode-** Press the Shift and the Select Keys

To reset the terminal to factory defaults, once in the setup mode right arrow 3 times to You have the selection "Default All". Select it and hit the F-10 Key to save and exit.

(F1 Key)= Columns= Econ-80  
Lines= 25 Lines

(F4 Key)= Baud Rate= 38400  
Rcv Hdshk= DTR

(F6 Key)= Backspace= You should see "T"s once you have backspaced

(F10 Key)= Exit= Right Arrow once (1) to Save Modes

(F10 Key) You should be out of setup

Note: If terminals are located a long distance from the server you may need to adjust The Baud Rate to 19200 and or 9600. Terminals that have modems directly connected to them will have the Rcv/Hdshk set to Xon/Xoff instead of DTR.