

Installing the DIGI Xr Series Portserver

The steps for installing the Digi Xr series port server are as follows:

- Step 1. Load MPI using swinstall (see other document)
- Step 2. Type **digicfg** at a pound sign
- Step 3. Choose the **install** option from the Digicfg menu
- Step 4. Choose **Install Acceleport Xr** family
- Step 4a. Choose the **type of Xr card** to install (4 or 8 port)
- Step 5. Set Altpin to **ON**
- Step 6. **Exit** out of Digicfg (do not relink the kernel until you are fully out of digicfg)
- Step 7. Relink the kernel
- Step 8. Reboot the machine

This will add tty addresses as follows

If you are using a 4 port Xr

ttyr1a
ttyr1b
ttyr1c
ttyr1d

If you are using an 8 port Xr

ttyr1a
ttyr1b
ttyr1c
ttyr1d
ttyr1e
ttyr1f
ttyr1g

If you have more than **one** Xr adapter installed on a machine, the following will apply-

Card 1--- ttyr1_
Card 2--- ttyr2_