

APIC error on some DELL's

```
login as root
cd /var/log
cat messages | grep -e unexpected
```

if you get a response
cd /etc

mcedit lilo.conf

example:

```
timeout=50
default=linux
boot=/dev/hda
map=/boot/map
install=/boot/boot.b
message=/boot/message
linear
```

```
image=/boot/vmlinuz-2.4.20-8
label=linux
initrd=/boot/initrd-2.4.20-8.img
read-only
append="hdc=ide-scsi root=LABEL=/"
```

```
image=/boot/vmlinuz-2.4.20-8
label=linux up
initrd=/boot/initrd-2.4.20-8.img
read-only
append="hdc=ide-scsi root=LABEL=/"
```

add to this line>>>> append="hdc=ide-scsi root=LABEL=/ **noapic**"

f10 save

type lilo and enter

cat lilo.conf again to make sure of no typeo's before having the customer reboot

BE VERY CAREFUL

if this fie is wrong the system will not come back up