


Pinout for Null Modem Serial Cable Non Factory Made

Note: This is the type of cable that is needed for the slaving of a Printer off of the back of a TCS.

- a. Cut and strip back the insulation shielding your Cat 5 strands (You should end up with Eight multi-colored wires.

1. Green-Green
2. Red-Orange
3. Orange-Red
4. Blue-Yellow
5. Yellow-Blue
6. Purple-Grey
7. Gray-Purple
8. Black-Black
9. Brown-Brown
10. Shielded Cable-Shielded Cable

Factory Made 9 Pin Female to 25 Pin Female Null Modem Cable

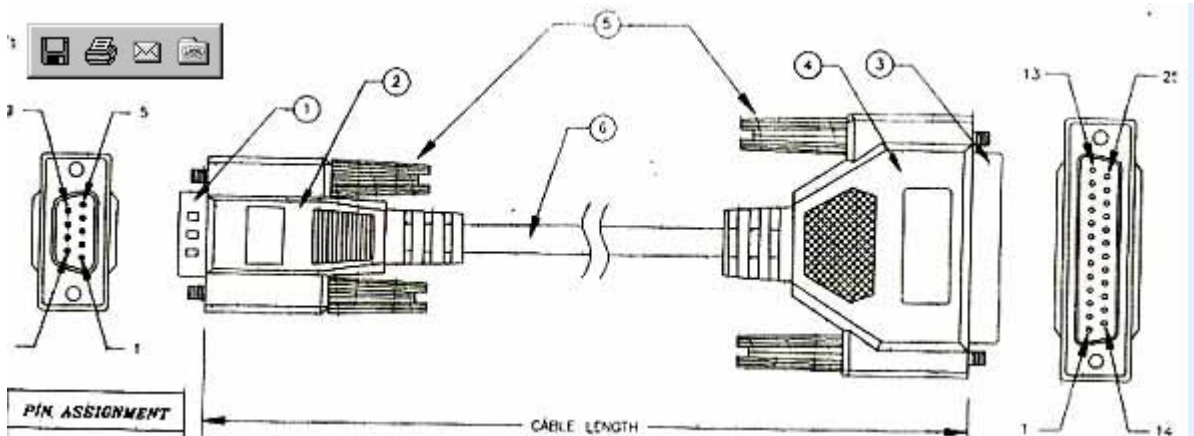

Typical 25 Pin Female to 25 Pin Female Null Modem Cable

