



# Symbol LS1900 Cobra

## Scan Sheet

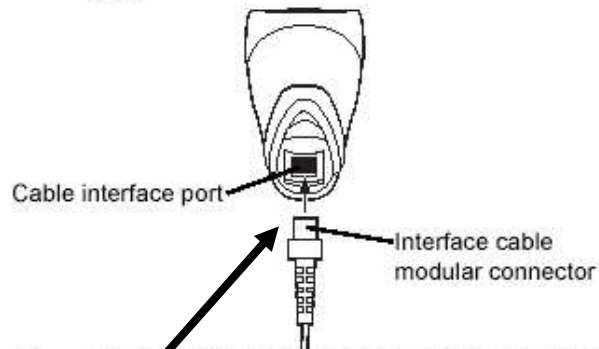



Plug 8 wire connector into port on back of scanner.

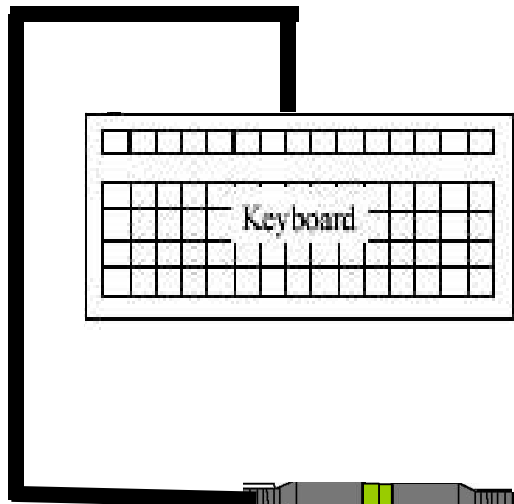

Plug cable from the keyboard into the female port

Plug 8 wire connector into port on back of scanner.

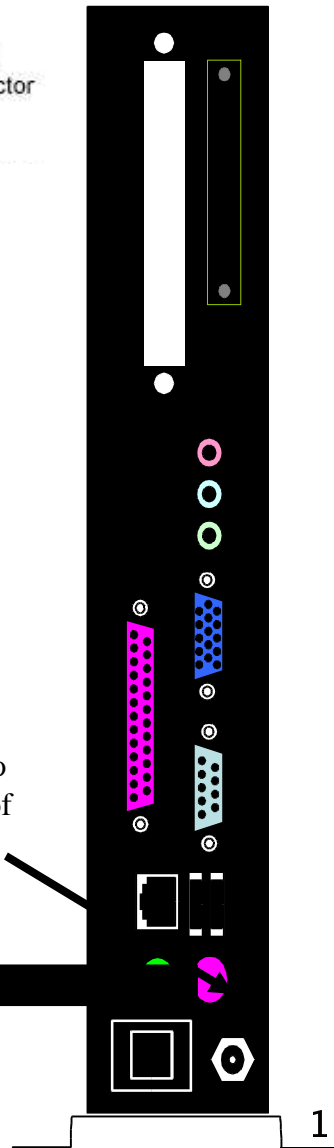


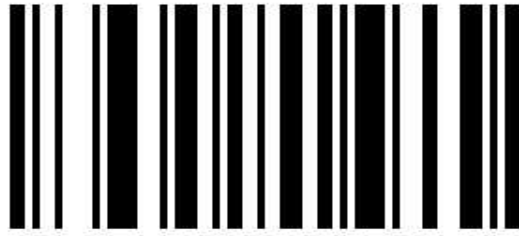


**Set All Defaults**




IBM PC/AT & IBM PC Compatibles<sup>1</sup>

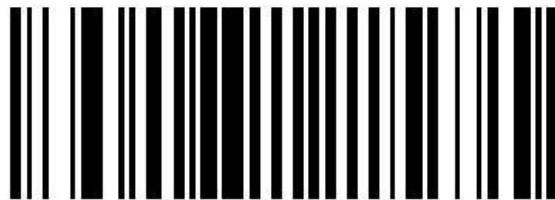


**Do Not Transmit UPC-A Check Digit  
(Disable)**

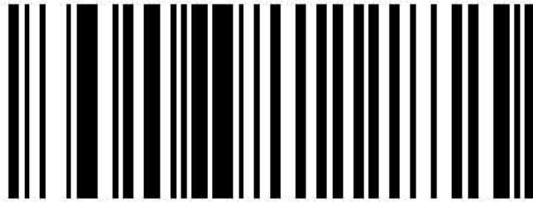


No Preamble  
(<DATA>)

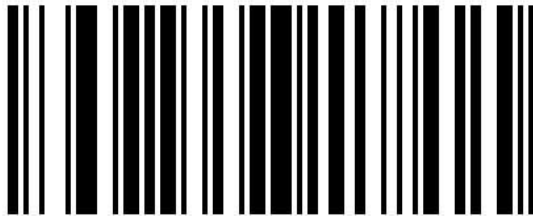


Begin New Rule

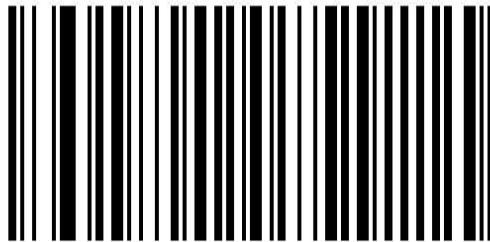


UPC-A

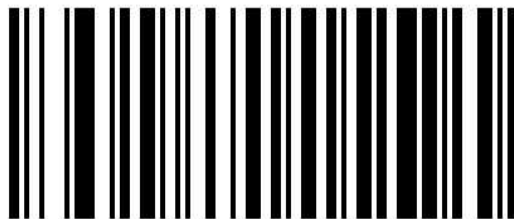


Send All Data That Re-  
mains

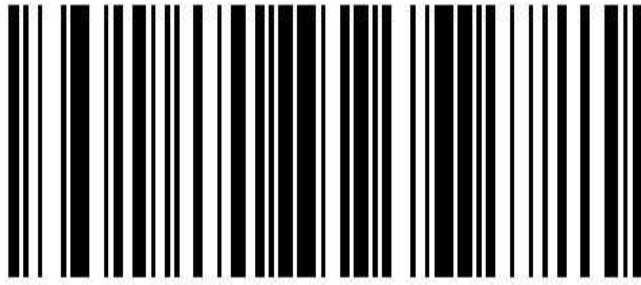


**Send Enter Key**

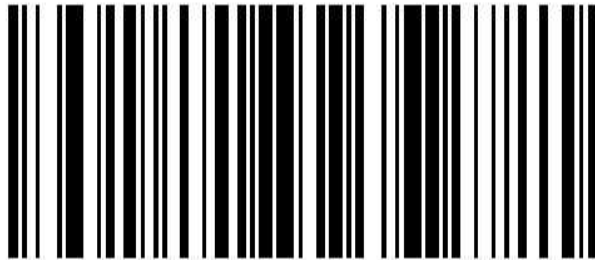


**Send Enter Key**

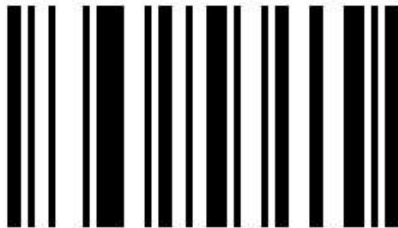


**Save Rule**

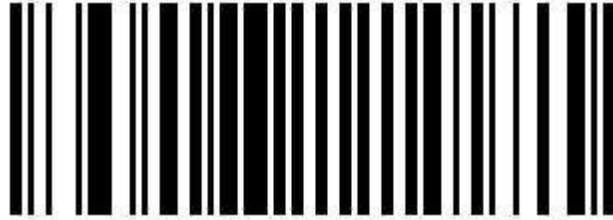


**\*Enable UPC-E**

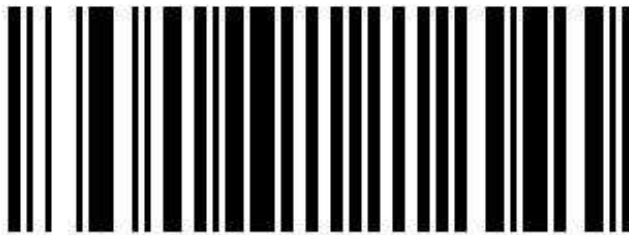


**Do Not Transmit UPC-E Check Digit  
(Disable)**

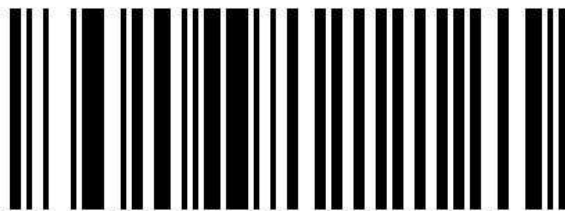


**No Preamble  
(<DATA>)**

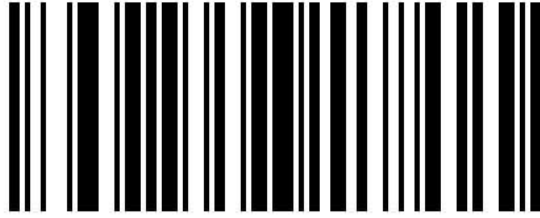


**Begin New Rule**

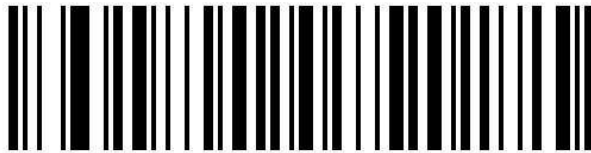


**UPC-E**

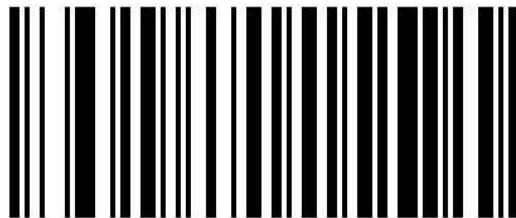


**Send All Data That Remains**

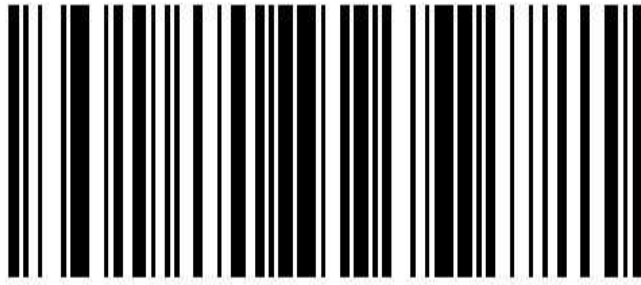

**Send Enter Key**

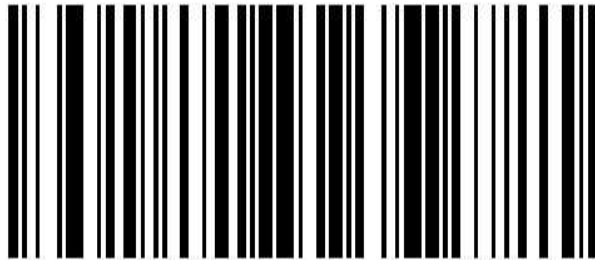

**Send Enter Key**

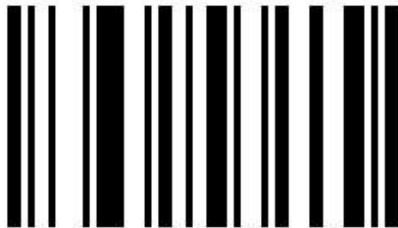

**Save Rule**