


Connecting the Welch Allyn 3800 USB Scanner to the Aquapad

Plug the flat end of the white USB adapter into one of the USB ports on the right side of the Aquapad.

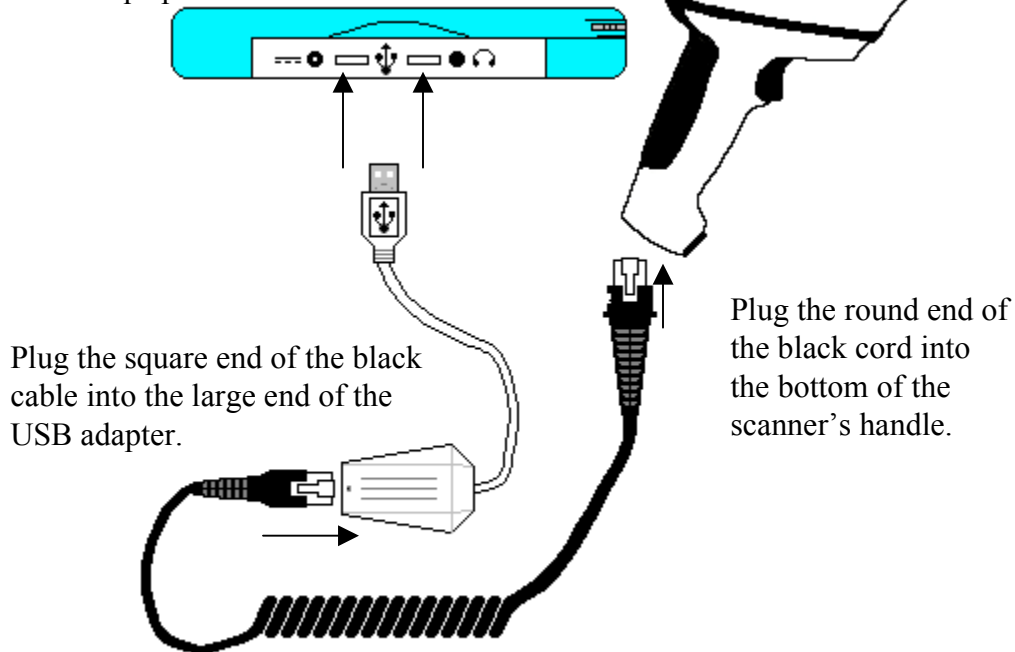

Plug the square end of the black cable into the large end of the USB adapter.

Plug the round end of the black cord into the bottom of the scanner's handle.

You will need a Welch Allyn 3800 USB scanner, the black USB cable # C&3501 Rev. B, the white USB adapter cable #CCA002800A, the Aquapad webpad, and the scan sheet for the Welch Allyn 3800 USB scanner.

- 1.) Plug the round end of the black cable (C&M 3501 REV B) into the Welch Allyn 3800 scanner.
- 2.) Plug the square end of the black cable into the large end of the white cable (CCA002800A).
- 3.) Plug the flat end of the USB adapter into one of the two USB ports on the Aquapad webpad.
- 4.) Scan the scan sheet for the Welch Allyn 3800 USB scanner one barcode at a time, from top to bottom.

Scanning problems with the Aquapad


Customers who call in with scanning problems with the Aquapad's are generally using them for inventory or purchasing. The usual symptoms are listed below as the customer would describe them over the phone:

- When I scan an item in purchasing, the cursor stops on Unit instead of Quantity.
- When I do my batch count the barcodes I scan don't show up or flash on the screen.

The problem is that the scanners are configured when they leave Advantage for point of sale, which requires 2 carriage returns (a carriage return is equivalent to pressing the [Enter] key.) In these purchasing and inventory functions you only need one carriage return. To correct the problem, the customer must rescan the scan sheets and when they get to the last page, scan only one of the boxes containing the **0** and **D** barcodes, then skip down to the **Save** barcode.


Worcen Anyln Image Team 3000 Hand Held Linear Imager With USB Connector


This barcode sets the scanner
to factory defaults

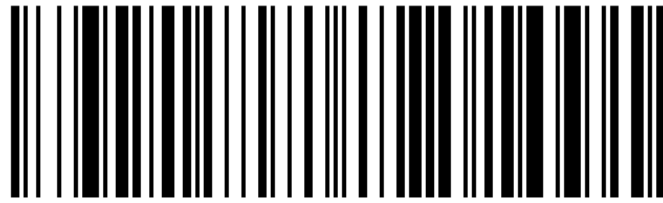



Factory Default Settings


This section sets the
scanner to transmit to the
usb port

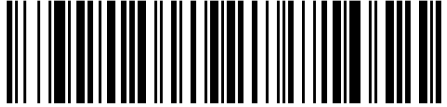
Terminal ID


1

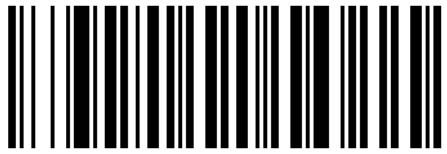

2


4



Save

Wenon Anyh Image Team 3000 Hand Held Linear Imager With USB Connector


This section clears all upc settings and sets the scanner to only read 10 digits

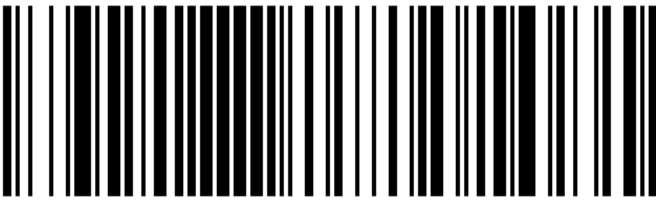

Default All UPC A Settings

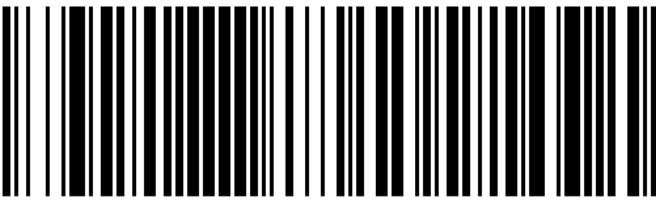

Check Digit Off

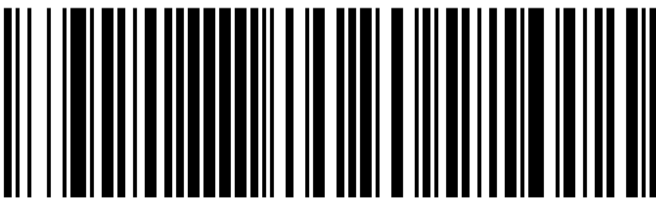

Number System Digit Off

This barcode tells the scanner to clear all suffixes



Clear All Suffixes

This barcode tells the scanner to add suffix




Add Suffix


When Any Image Team 3000 Field

Linear Imager With USB Connector


This Section tells the scanner to add the suffix to upc barcodes only

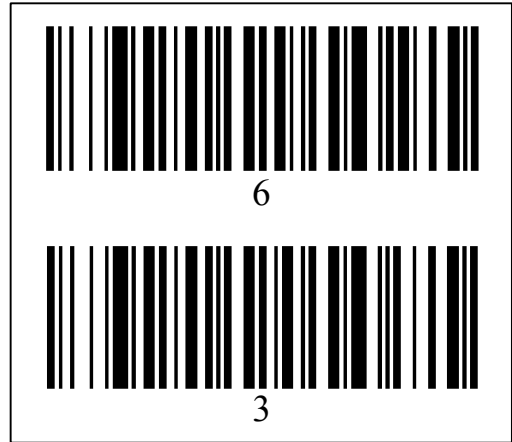

This section adds a carriage return to the suffix.

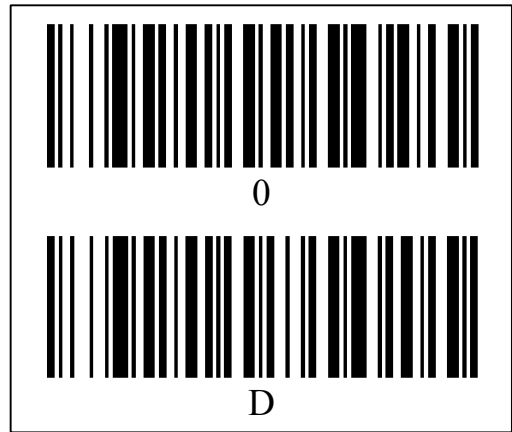

This section adds a second carriage return. That means that in point of sale the cursor will stop on the next line down. If you want to stop on the quantity field do not scan this section. If you want to stop on the next line or you do not know where you want to cursor to stop scan this section along with the preceding section.

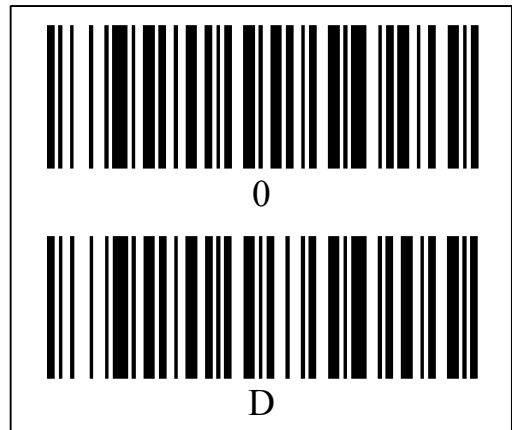

This barcode saves your settings

