


Connecting the Welch Allyn 3800 USB Scanner to the Aquapad

Plug the flat end of the white USB adapter into one of the USB ports on the right side of the Aquapad.

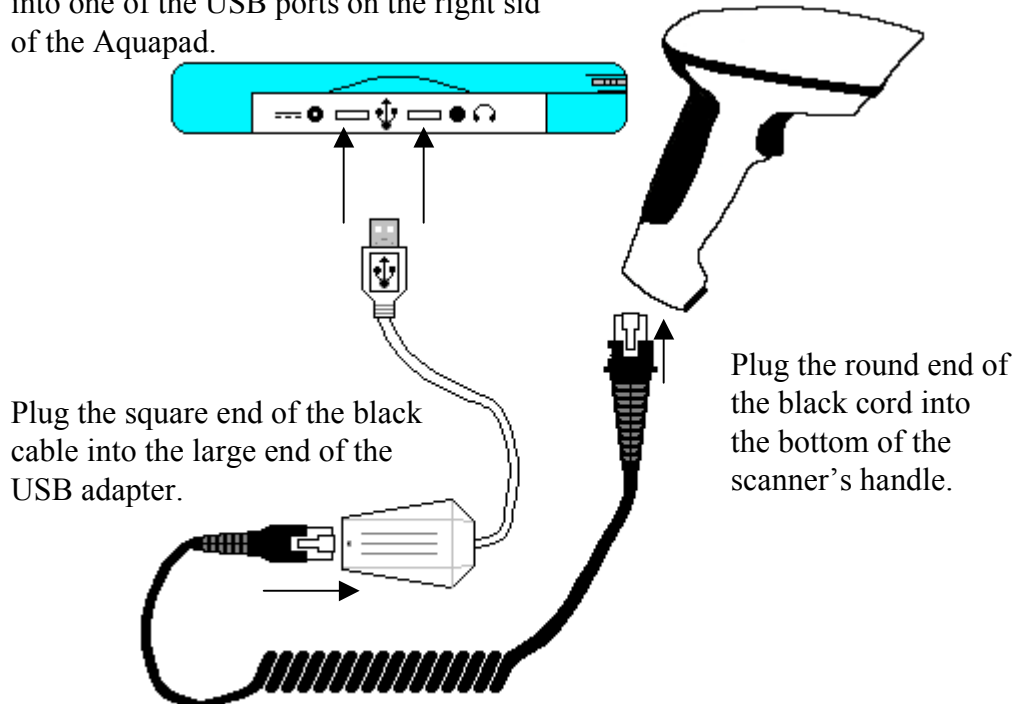

Plug the square end of the black cable into the large end of the USB adapter.

Plug the round end of the black cord into the bottom of the scanner's handle.

You will need a Welch Allyn 3800 USB scanner, the black USB cable # C&3501 Rev. B, the white USB adapter cable #CCA002800A, the Aquapad webpad, and the scan sheet for the Welch Allyn 3800 USB scanner.

- 1.) Plug the round end of the black cable (C&M 3501 REV B) into the Welch Allyn 3800 scanner.
- 2.) Plug the square end of the black cable into the large end of the white cable (CCA002800A).
- 3.) Plug the flat end of the USB adapter into one of the two USB ports on the Aquapad webpad.
- 4.) Scan the scan sheet for the Welch Allyn 3800 USB scanner one barcode at a time, from top to bottom.